


## Skookum Synth 002 "ANEX" Anushri Expander - Parts guide

**Notes:** To help with proper alignment it is recommended to solder the MIDI and audio jacks after mounting them to the front panel. J1 is mounted on the side that has the "FROM ANUSHRI" annotation, not on the same side as the rest of the SMD components.

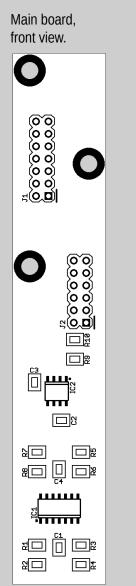

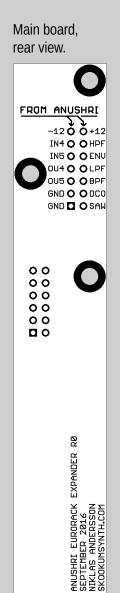

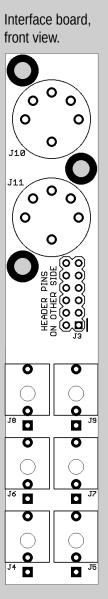

## Parts list - All resistors and capacitors are 0805 size, IC's are SOIC

R1, R3, R5	RESISTOR, 30K
R7, R8	RESISTOR, 100K
R2, R4, R6, R9	RESISTOR, 120K
R10	RESISTOR, 680K
C1, C2, C3, C4	CAPACITOR 0.1uF 50\

IC1 TL074 IC2 TL072

J1 14 POS, DUAL ROW HEADER, MALE
J2 12 POS, DUAL ROW HEADER, MALE
J3 12 POS, DUAL ROW HEADER, FEMALE
J4, J5, J6, J7, J8, J9 3.5MM AUDIO JACKS, "THONKICONN"

J10, J11 CUI Inc. SD-50BV DIN JACK

OTHER: 3X 12mm M3 F/F STANDOFF

3X 10mm M3 F/M STANDOFF 12X M3 MACHINE SCREW 14-POSITION IDC SOCKET

14-CONDUCTOR RIBBON CABLE (PEEL OFF 2 CONDUCTORS FROM A 16-COND. CABLE TO MAKE A

14-COND. CABLE)

## Skookum Synth 002 "ANEX" Anushri Expander - Wiring guide

Notes: Wiring is easiest done with a 14 conductor ribbon cable with a female IDC connector on the expander side.

This will allow you to detach the expander, if necessary.

It is recommended to provide mechanical support to the individual wires with a non-conductive adhesive such as hot glue.

View of Anushri main board, solder side. 0 0 4 0000000 Rear view of expander.



